

Exploded View

ALM Alternator

Assemblies

ALM-5103

No.	Description	Part No.	
1	Rotor Assembly	ALM-2028	•
2	Brush Set	ALE-1012LS	•
3	Slip Ring End Head Assy.	ALE-1002GS	•
4	SRE Bearing	X-3417	•
5	Drive End Head Assembly	ALM-1003	•
6	DE Bearing	X-3416	•
7	Stator Assembly	ALE-2008G	•
8	Negative Rectifier (Pkg. Of 3)	XA-944JS	•
9	Positive Rectifier & Plate Assy.	ALE-1004	•
10	Term. Stud Package	90-2359	•
11	Brush Spring Set	ALA-19S	•
12	DE Retainer	GR-32	•
13	Thru Bolt Package	ALA-20S	•
14	Eyelet Package	90-818	•

