

# Exploded View

## Assemblies

### MHB Starting Motor

No.	Description	Part No.	MHB-4001	MHB-4002	MHB-4003	MHB-4004	MHB-4005	MHB-4006	MHB-4007	MHB-4008	MHB-4009	MHB-4010	MHB-4011	MHB-4012	MHB-4013	MHB-4014	MHB-4015	MHB-4016	MHB-4017	MHB-4018	MHB-4019	
1	Armature	MHB-2399	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
		MHB-2383				•																
		MHB_2386																•				
		MHB-2420						•														
2	Brush Set	MHB-2012S	•	•	•			•	•	•		•	•	•	•			•	•	•	•	
		MHB-2012AS				•	•				•					•	•					
3	Frame & Field Assy.	MHB-2397	•	•	•				•	•		•	•	•	•			•	•	•	•	
		MHB-2384B																•				
		MHB-2384S				•		•														
		MHB-2418					•															
		MHB-2397A										•					•					
4	Comm. End Head Assy.	MHB-2400	•	•	•				•	•	•	•	•	•	•	•		•	•	•	•	
		MPB-2002D																•				
		MPB-2002CS				•		•														
		MHB-2400A					•															
5	C.E. Bearing	X-3991	•	•	•	•		•	•	•	•	•	•	•	•		•	•	•	•		
6	Bendix Drive	EBB-75A (a)	•	•	•				•			•	•	•	•							
		EBB-133 (b)				•																
		EBB-142 (a)										•					•					
		EBB-124A (b)																•				
		EBB-131A (b)																	•	•	•	•
7	Bendix Drive Shaft	(c)	•																			
		(d)		•																		
		(e)			•																	
		(f)							•		•											
		MZ-326										•	•	•	•	•						
		MZ-326A																	•	•	•	•
8	DE Head or Pinion Hsg.	(c)	•																			
		(d)		•																		
		(e)			•																	
		MZ-1147				•																
		MHB-2137 (g)					•															
		(f)						•		•												
		PS-1432C										•						•				
		PS-1437B											•						•			
		PS-2432B												•						•		
		PS-1432E													•	•				•		
PS1435															•							



